

MSG 300OF Simplify Adjusting

1



Conect power suply terminal

2



Conect Acoustic load to HF output terminals

3




Conect Ampermeter clamp to power supply

4



Conect remoute control.

5

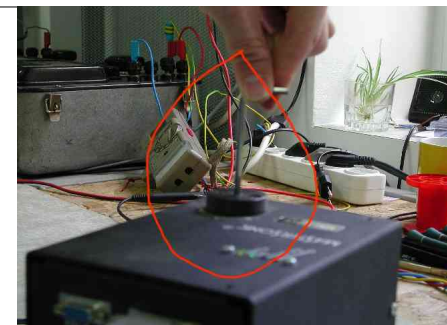

Open coil to MIN inductans

6



Turn the Potenetiometer (OV) on the left end

7



Plug in to mains

8



The yellow LED light the green LED flasing

9




Turn on the genetrator

10




Watch the ampers

11

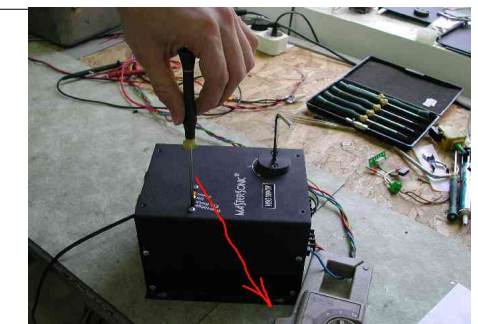

Turn the Potenetiometer (OV) on the right and fine the good resonance

12

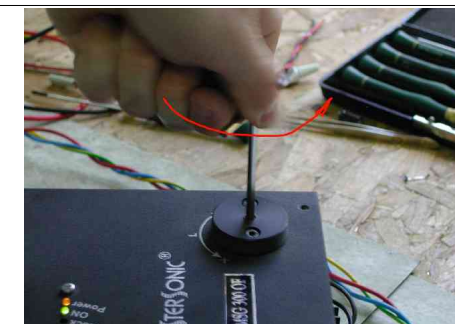

Increase the inductivity until find a maximum of current

13



Maximum current show the good resonance

14



Decrease the inductivity until adjust appropriate power

15