

MSG.300.OF -S

Step by step Settings

1



Conect main suply terminals

2



Conect Acustic load to HF output terminals

3




Conect Ampermeter clamp to power supply

4



Conect remote control.

5

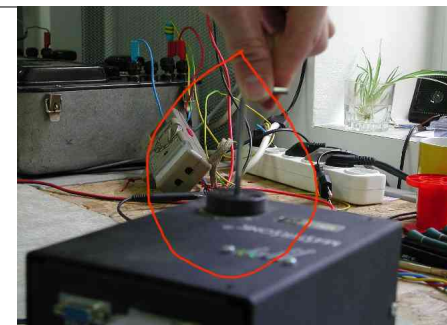

Open the coil to MIN. inductance

6



Turn the Potenetiometer (OV) to the left end

7



Plug in to mains

8



The yellow LED is ON
the green LED blinking

9




Turn ON the genetrator

10




Watch the ampermeter

11

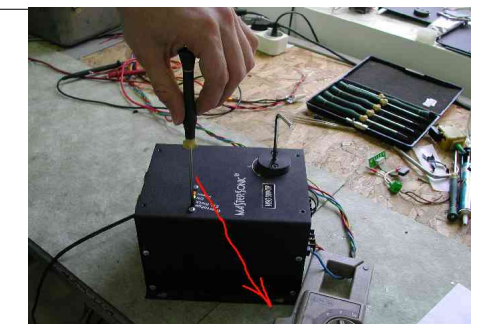

Turn the potentiometer (OV)
on the right and find the good
resonance

12

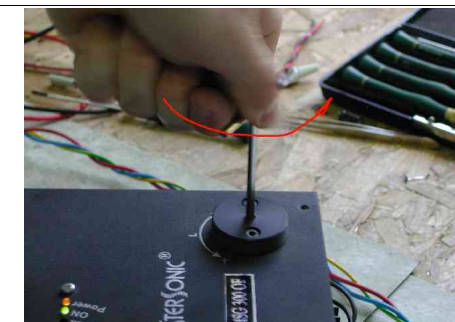

Increase the inductance until
getting maximal current

13



Maximal current shows the
good resonance

14



Decrease the inductance until
getting appropriate load power

15